



**IMPORTANT:** Please print without scaling and confirm print out dimensions are accurate to scale below



METRO MARINE F-SERIES  
**RGBW ELONGATED VERTICAL**  
UNDERWATER LIGHTING FIXTURE  
Installation Mounting Template

- 1) Align arrow with vertical.
- 2) Remove backing from adhesive and place in desired location.
- 3) Using a 30mm or 1 -1/8" drill bit or step drill bit, drill center hole clean through.
- 4) Using a 4.1mm or 5/32" drill bit, drill the 4 holes for the four 5.0mm mounting screws.
- 5) Remove template and discard.

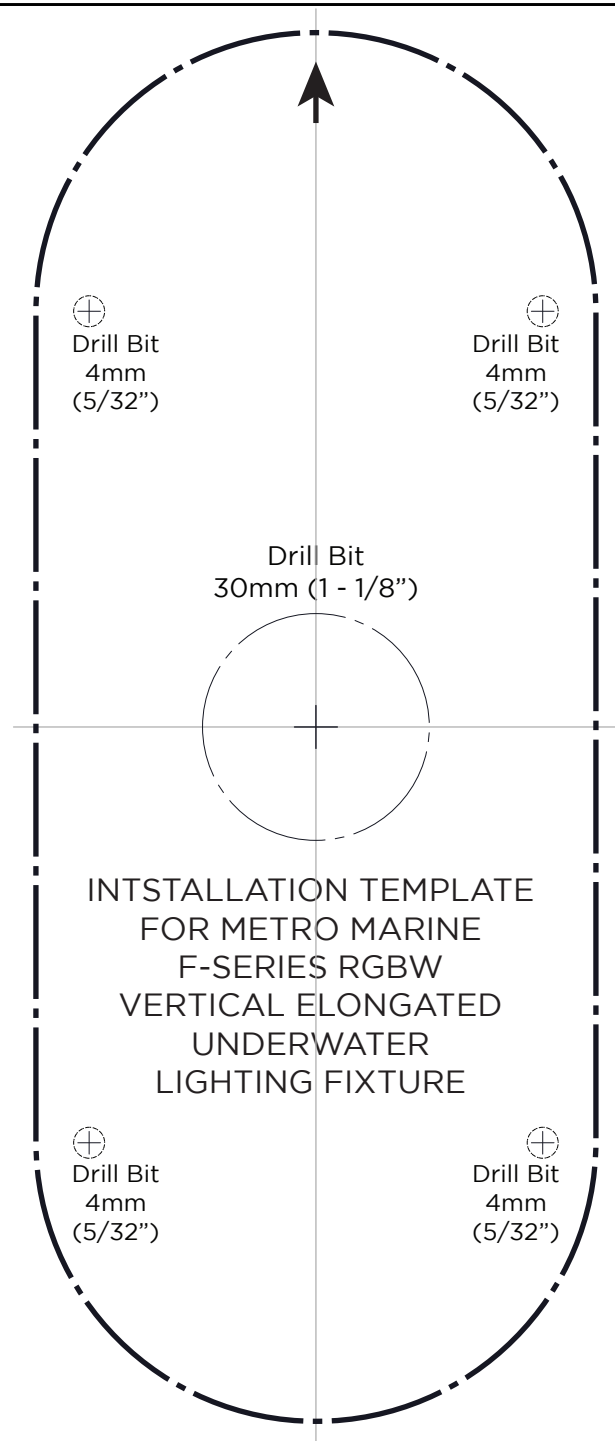

Questions or Concerns, please contact Metro Marine LLC: [www.metro-marine.com](http://www.metro-marine.com) • [info@metro-marine.com](mailto:info@metro-marine.com)